

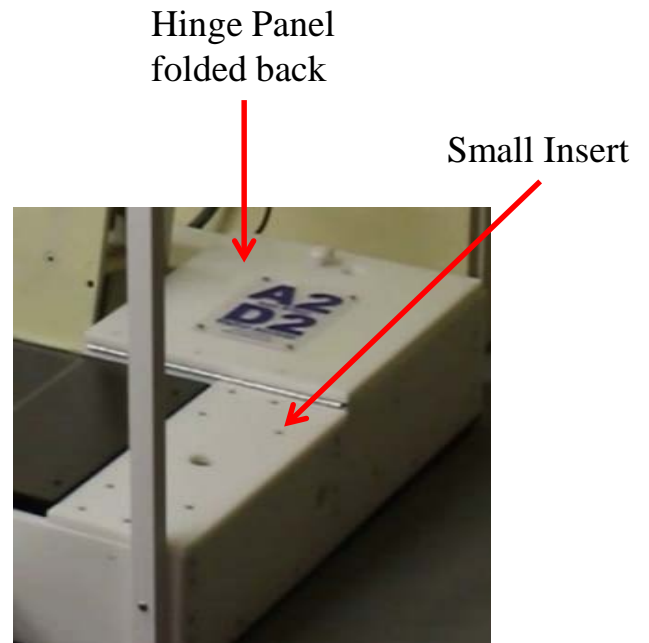
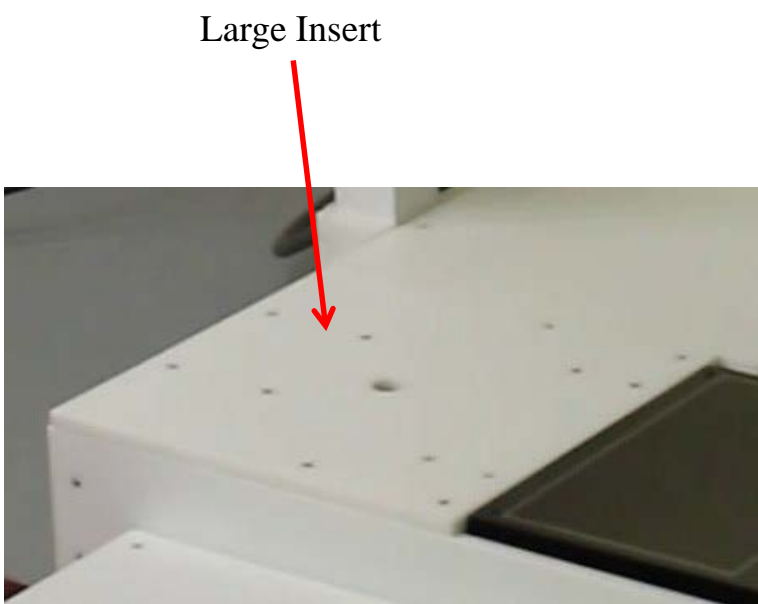


Model 128s Base Positioning – DP and Oblique Views

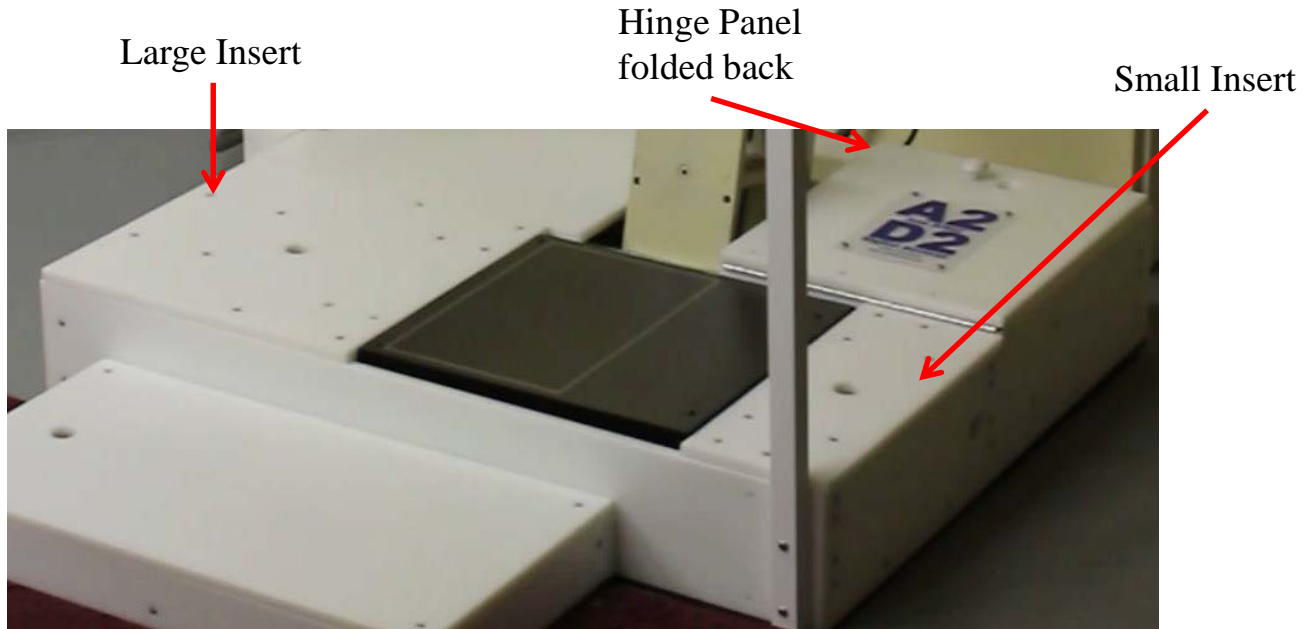



Model 128s Base Positioning – Lateral View

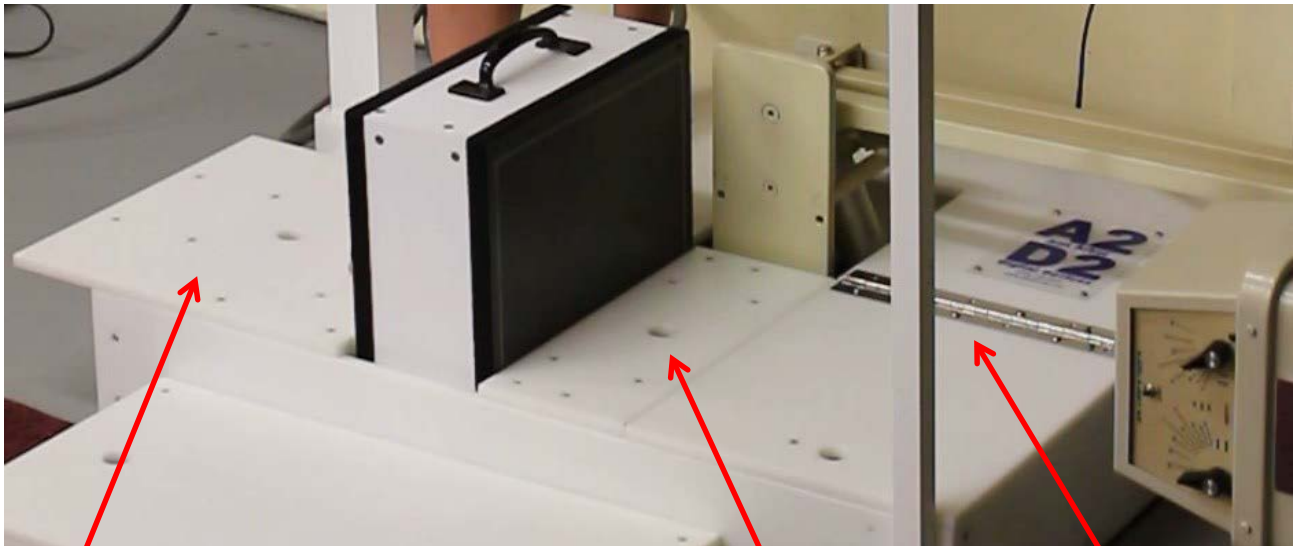

Large Insert
(with overhang)

Small Insert

Hinge Panel

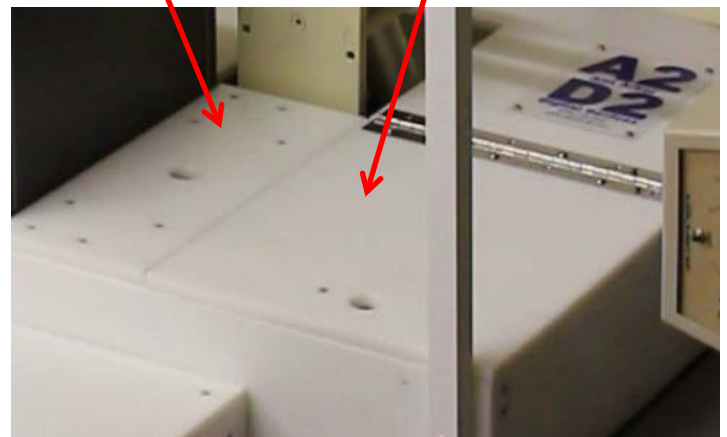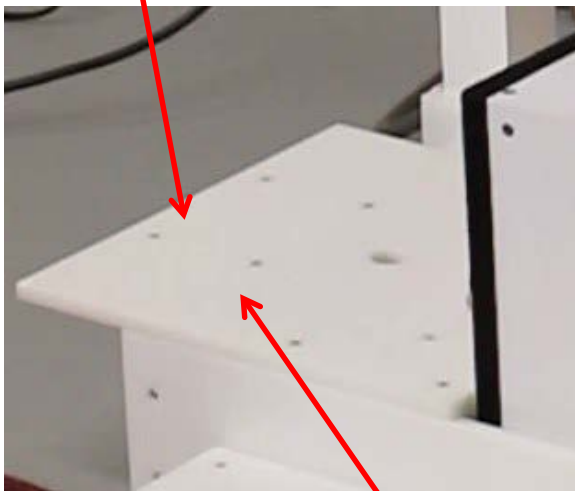

The Large Insert needs to be lifted over the first cleat attached to the bottom and slid to where the second cleat will stop it at the correct position